

California Faucets reserves the right to make modification and specification changes at any time. Please visit www.calfaucets.com for most current technical data.

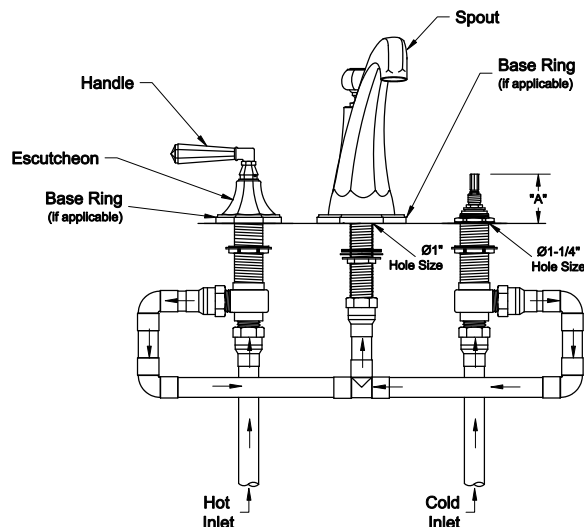


Fig. 1

NOTE:

-The manufacturer recommends the use of hard piping (not flex connections) for all connections.

-It is also recommended that an access panel be provided for all Roman Tub installations.

1

Roman Tub Spout Connectors

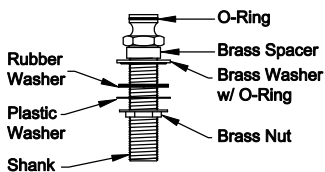


Fig. 2A



Fig. 2B



Fig. 2C



Fig. 2D

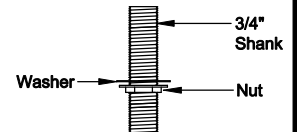


Fig. 2E

**Quick Connect
Model #: QC-50**

Use With Rough Kit #:
08-75-50

For Series #:
5008

**Quick Connect
Model #: QC-99**

Use With Rough Kit #:
08-75-99

For Series #:
3208 3308 3408 3508
3608 3808 4008 4208
4308 4608 4708 5108
5208 5508 5708 5808
5908 6008 6408 6708
6808 6908 D-73

**Quick Connect
Model #: QC-63**

Use With Rough Kit #:
08-75-63

For Series #:
6308
Series 6308 uses
Broach Adapter



Fig. 3

**Quick Connect
Model #: QC-63**

Use With Rough Kit #:
08-75-65

For Series #:
6508
6608

**3/4" Nipple
Model #: QC-75**

Use With Rough Kit #:
08-75-75

For Series #:
5308

For All Series Except: 5308

- Remove brass nut, plastic washer and rubber washer from Quick Connect assembly.
- Ensure that O-ring is properly seated in brass washer.
- Insert Quick Connect assembly through hole in deck.
- Place Rubber Washer, Plastic Washer and Brass Nut onto Shank from below and firmly tighten.
- Seat Spout onto Quick Connect.
- Rotate Spout to desired position and tighten setscrew.
- Use thread sealant to seal all fittings with threads.

For Series: 5308

- Apply thread sealant to one end of the Shank and tighten into Spout.
- Place spout base ring (if applicable) onto deck, over the spout shank.
- Insert Shank through deck hole and from below place Washer and Nut onto Shank.
- Rotate Spout to desired position and firmly tighten nut.
- Use thread sealant to seal all fittings with threads.

IMPORTANT: All soldering shall be performed prior to attaching fitting to Valves and Quick Connect, otherwise severe damage may take place and void warrantee

2

Install valve bodies:

NOTE: Hot & cold valves are labeled: *cold=blue & hot=red*.

- Remove top nut and turn bottom nut with fiber washer down the valve until it stops.
- Insert valve through hole from below and install top nut (if applicable), and adjust to proper height, see Fig. 4A (also refer to "A" dimension).
- Tighten the bottom nut to secure the valve.
- Install trim parts (base ring if applicable), escutcheon and handle and tighten handle set screws with Allen key provided.

REMINDER: Please retain allen key as handles may require re-tightening with normal use.

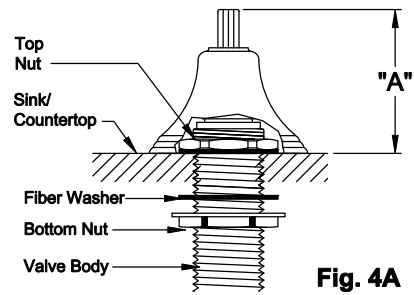


Fig. 4A

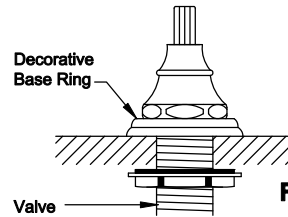


Fig. 4B

Installation Note for series:

32, 33, 34, 35, 36, 43, 57, 60, 61, 67, 68 & 69.

The trim to those products do not require a top nut to be installed on the valve (See Fig. 4A)

The decorative base ring and escutcheon takes the place of the top nut. (See Fig. 4B).

**"A"
DIMENSION**

"A" Dimension is
from top of counter/tub
top to tip of stem broach.

Series #	Handle	Diverter
3208	2 3/8"	2 3/8"
3308	2 3/8"	2 3/8"
3408	2 3/8"	2 3/8"
3508	2 3/8"	2 3/8"
3608	2 3/8"	2 3/8"
3808	2 5/8"	2 5/8"
4008	2 5/8"	2 5/8"
4208	2 5/8"	2 5/8"
4308	2 1/4"	2 1/4"
4608	2 1/2"	2 1/2"
4708	2 1/2"	2 1/2"
5008	2 1/4"	2 1/4"
5108	2 1/2"	2 1/2"
5208	2 5/8"	2 5/8"
5308	2 1/4"	2 1/4"
5508	2 5/8"	2 5/8"
5608	2"	2"
5708	2"	2"
5808	2 5/8"	2 5/8"
5908	2 5/8"	2 5/8"
6008	2 1/4"	2 1/4"
6108	2 1/4"	2 1/4"
6208	1 1/4"	1 1/4"
6308	3"	3"
6408	2 5/8"	2 5/8"
6508	2"	2"
6608	2"	2"
6708	2 1/4"	2 1/4"
6808	2 3/8"	2 3/8"
6908	2 3/8"	2 3/8"

3

Piping:

- Install piping (not provided) to connect hot & cold valves to connector tee (see Fig. 1).

NOTE: The manufacturer recommends these connections be made in hard copper.