

 


**ASSEMBLY INSTRUCTION****4E/4KRVL or C****VOLUME CONTROL VALVE****4E-4KRVL****4E-4KRVC****REMOVAL OF FIXTURE:**



Always turn the water supply off before removing the existing fixture or disassembling a valve. Open all handles to relieve water pressure and to ensure that the water has been successfully turned off.




**CARE OF FIXTURE:**



The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

4ER000 ( 3 / 4 " )  
4KR000 ( 1 / 2 " )  
Rough-In Valve

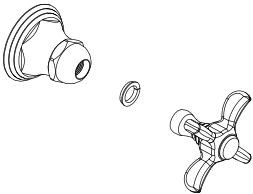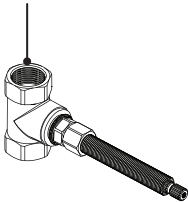


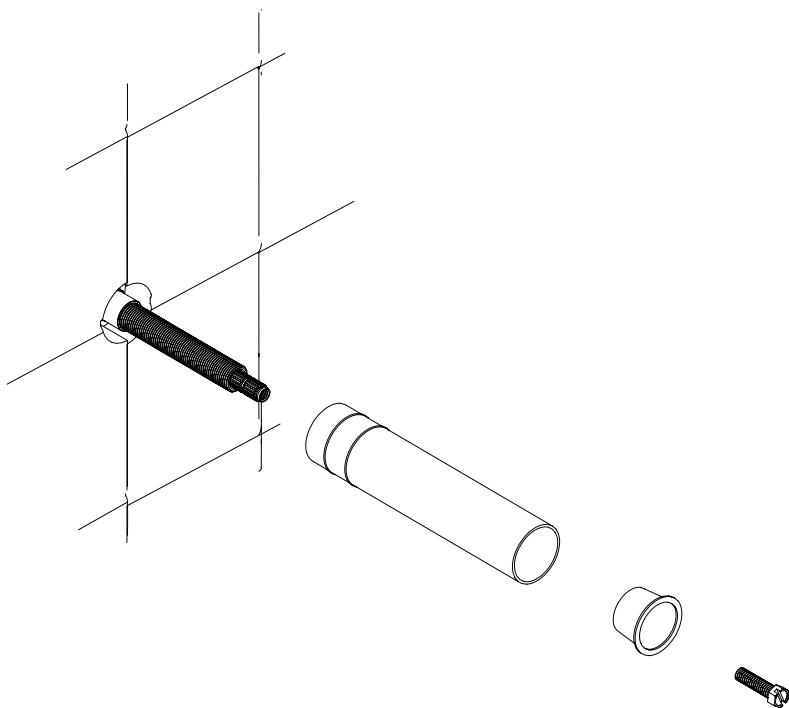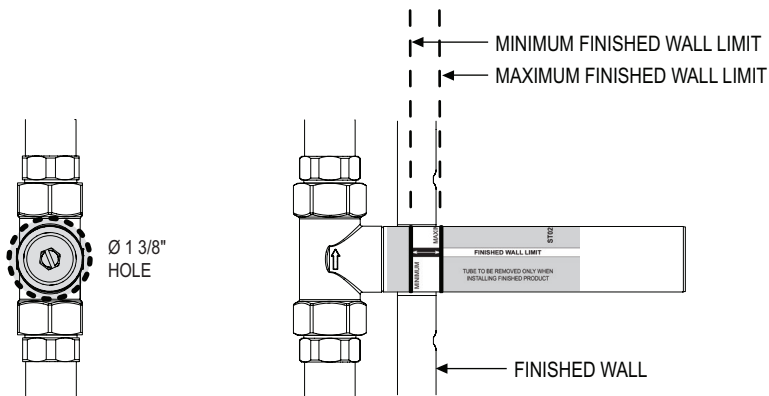

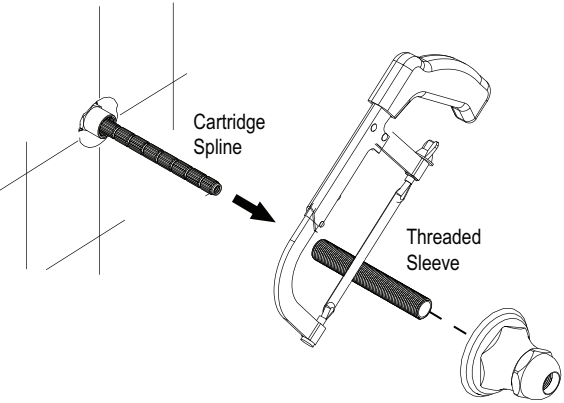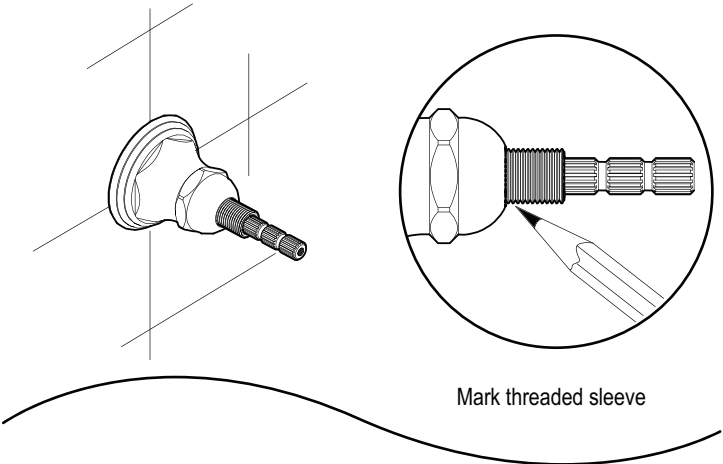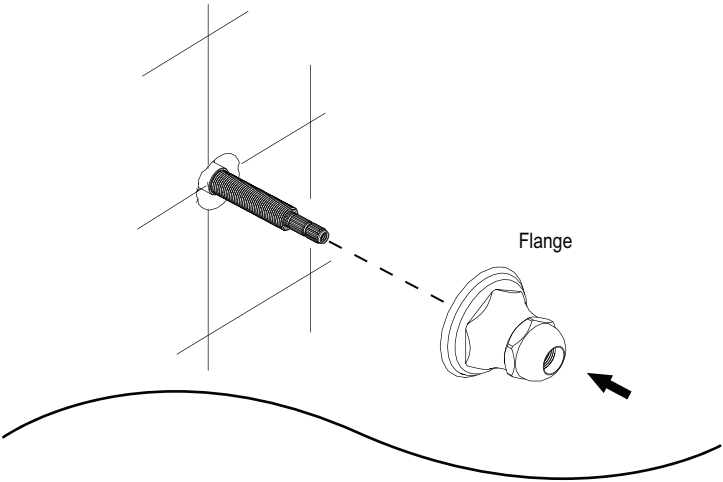


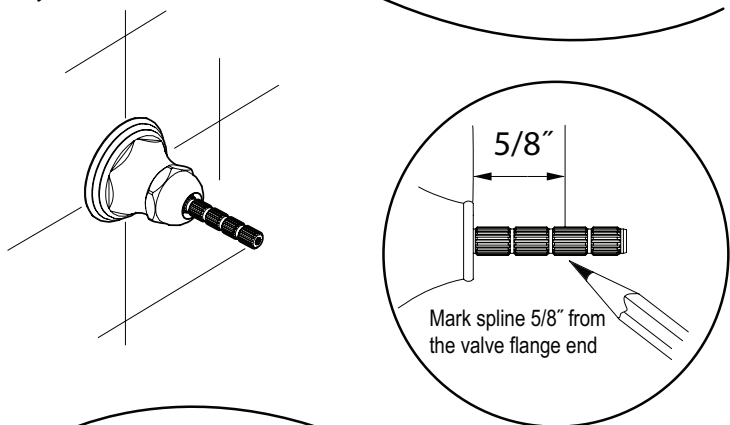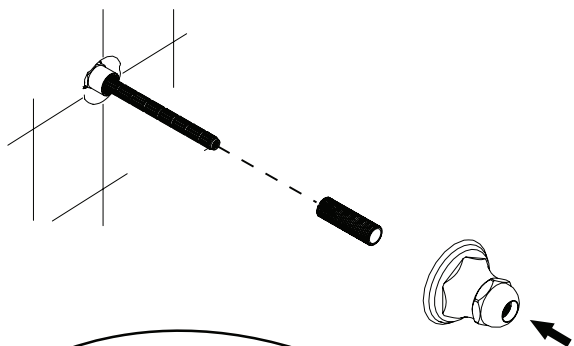


Cut spline where marked

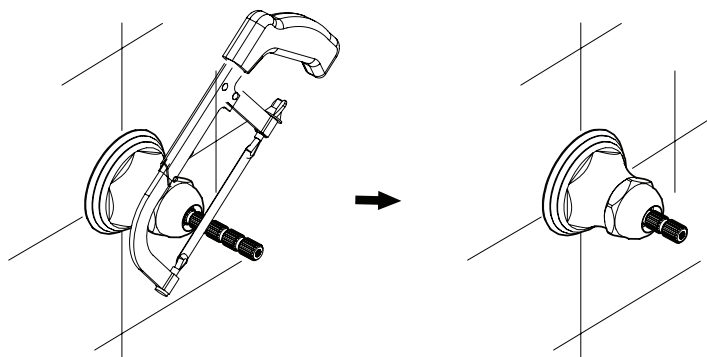


Turn cartridge spline into OFF position  
before installing handles

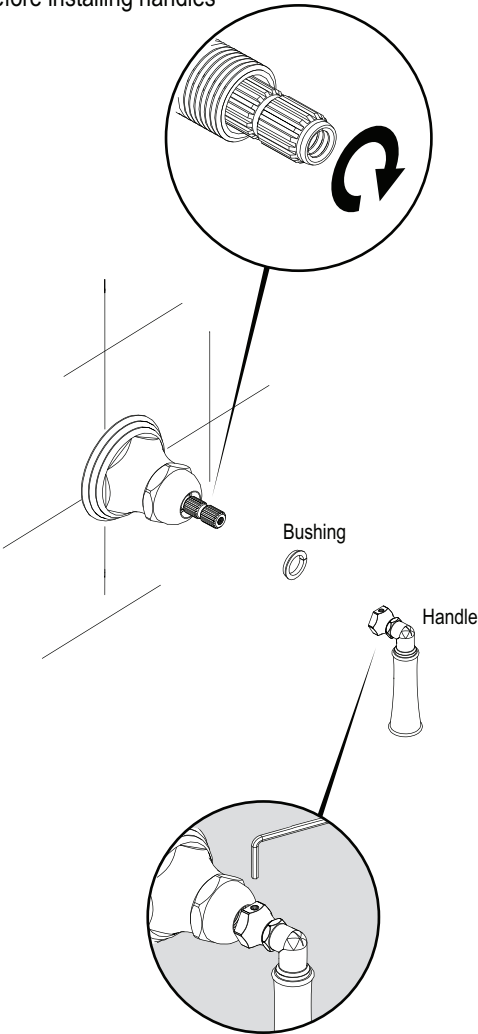


# HANDLE ALIGNMENT (4E/4K)

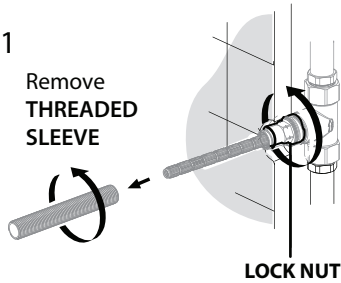

Loosen the Lock Nut using  
\* **17mm Deep Socket, 1/2" Drive**

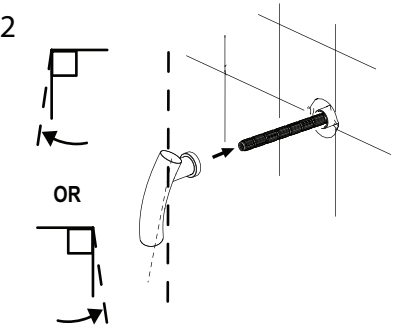



Replace handle one tooth off  
from the OFF position as shown  
(try both direction as needed)

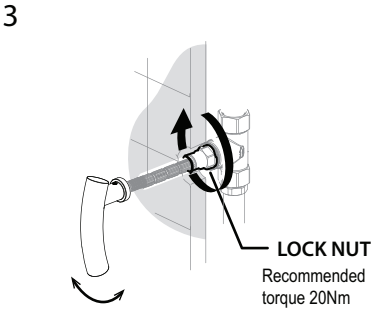

Turn the handle towards the desired ON  
alignment. Then tighten the lock nut to  
secure. This adjustment should not be  
more than 25°.

**FEATURES:**

- Brass construction with choice of 21 finishes
- Lever or Cross handle
- Quarter turn, ceramic disc cartridge
- 2.5 gpm @ 60 psi

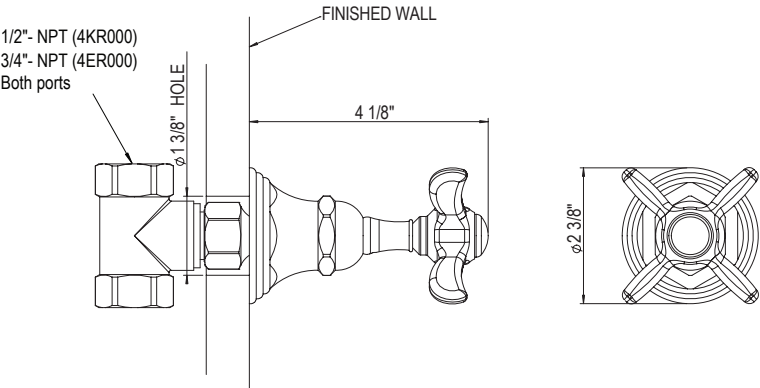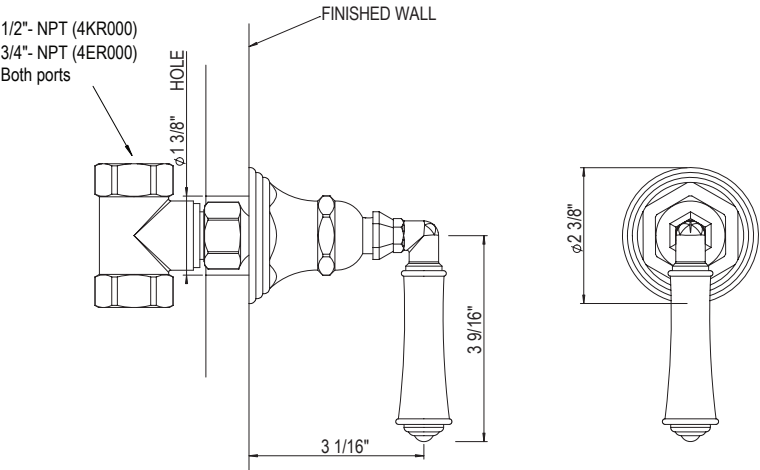

**CONTACT US:**

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit [www.rubinet.com](http://www.rubinet.com)