

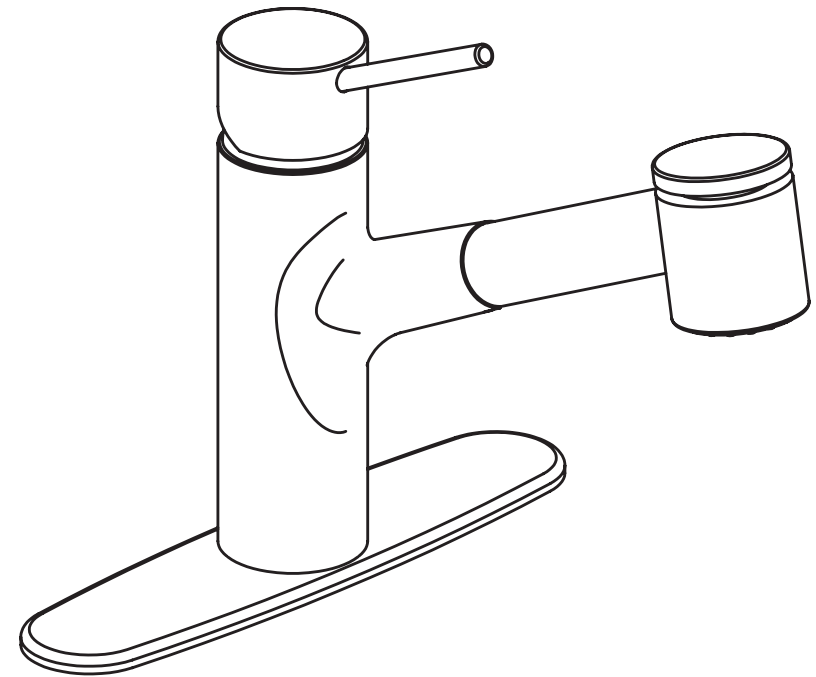
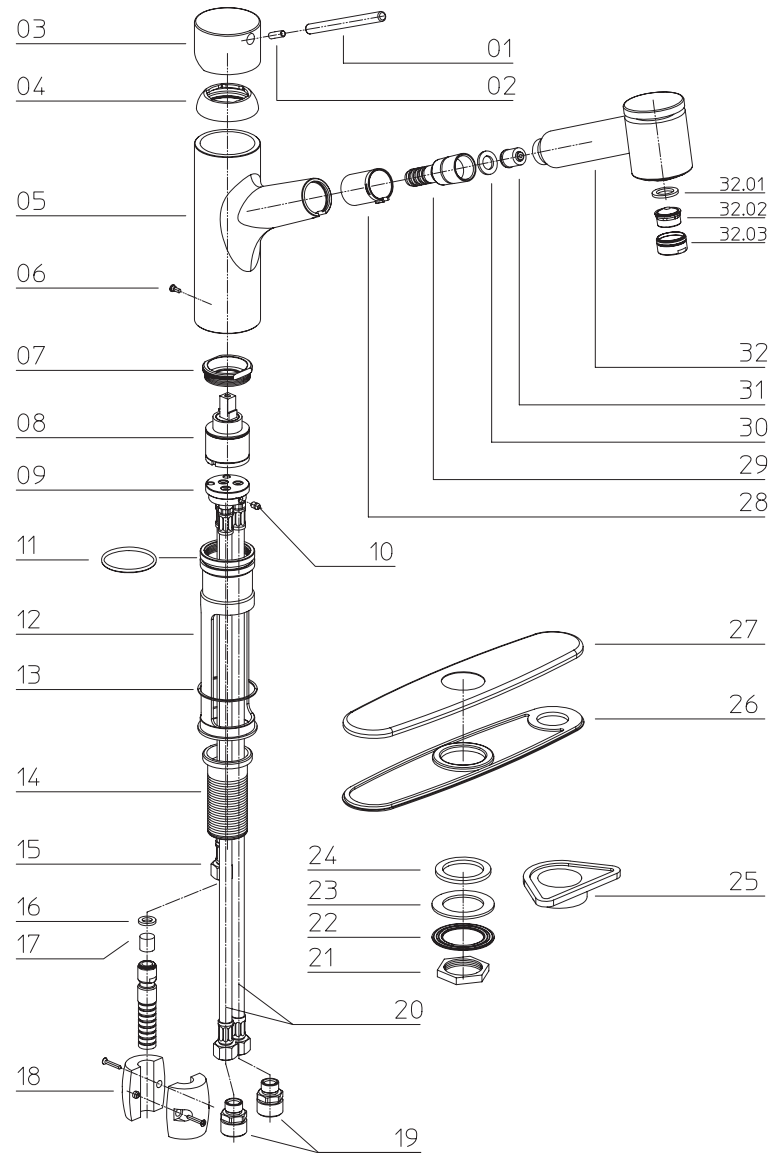
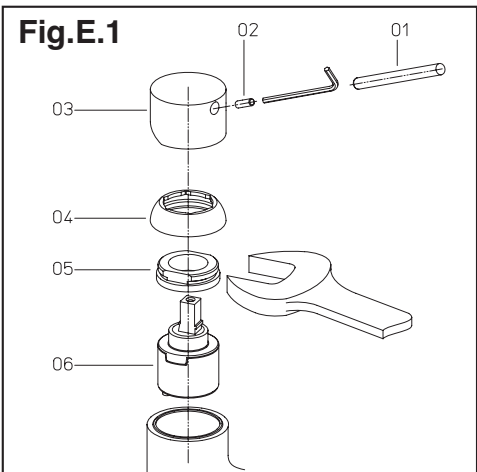
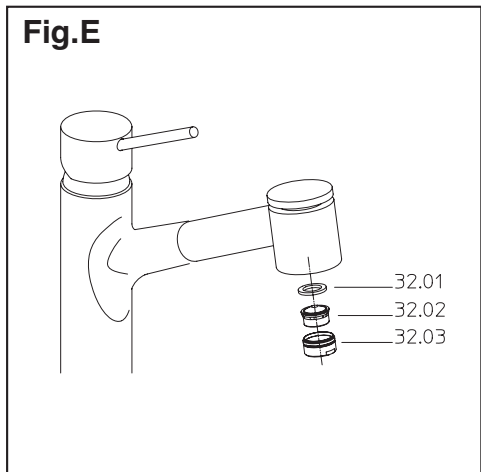
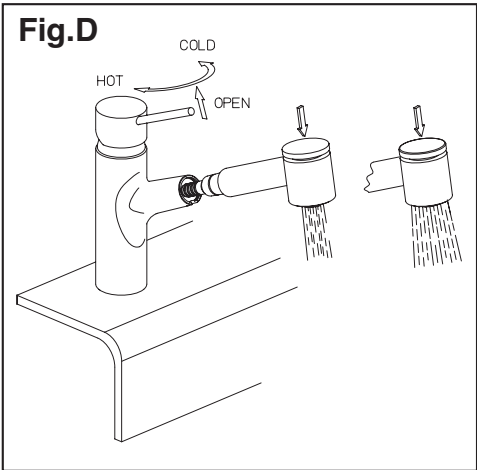
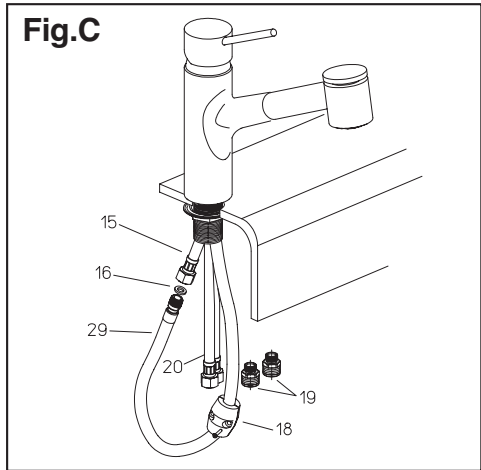


ASSEMBLY INSTRUCTIONS

INSTRUCCIONES PARA EL MONTAJE

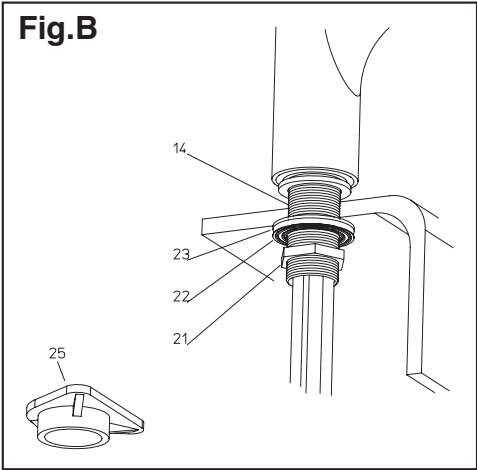

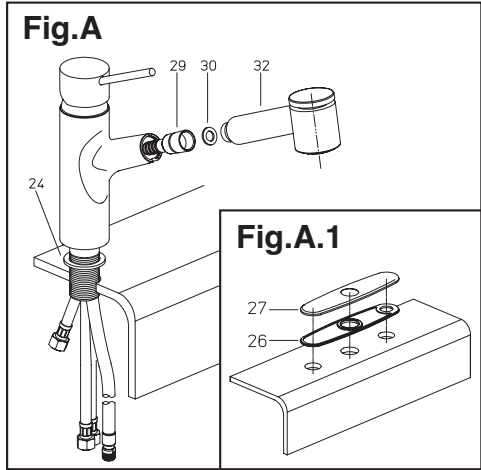

TECHNICAL DATA:

Supply	Recommended	Max.	Min.
Hot water temperature	65 °C (~150F)	80 °C (~175F)	15 °C (~60F)
Operating pressure	3 BAR (~45PSI)	5 BAR (~75PSI)	0.5 BAR (~7PSI)

In case of working pressure higher than 75 psi (5 BAR), it would be advisable to install a working pressure reducer.

For the politics of mutual improvement, Paini SpA reserves the right to make revisions in product specifications without notice, therefore the images and data contained in this instruction sheet have to be considered as indicative.

Cleaning tips:

Chrome-plated parts or ones with other finishes should be cleaned with mild soap and water only, using a sponge or a soft cloth. To clean the aerator, use only a liquid lime-removal product. IMPORTANT: DO NOT USE abrasives or products containing a high acidity.

Fig. A:

Place the faucet in the hole of the sink and verify the presence of the washer -24- as shown in the figure. screw the shower -32- to the flexible -29- and place the washer -30- in between.

Fig. A.1:

If the sink has 3 holes, use the provided 8" plate: place the plate -27- on the hole of the sink placing the plastic sheet -26- between the fixture and the plate.

Fig. B:

Slip the washer -23- and the shaped seal -22- onto the threaded pin -14- and fix the faucet with the nut -21-. Should it be necessary to increase the steadiness of the faucet, use the flange -25- between the washer -23- and the sink.

Fig. C:

Connect the supply tubes -20-: the left one to the hot water supply and the right one to the cold water supply. If needed use the nipple -19-. Connect the spray hose -29- to the exit flexible of the faucet -15- placing the washer -16- in between. Connect the counterweight -18- making sure to guarantee a run long enough to take out the spray.

Fig. D:

Verify the working of the faucet:

As shown in the picture, when the faucet is turned on, water comes out from the aerator. Acting on the upper part of the spray, the flow is diverted to spray mode; turning a bit the button on top of the spray to the right or to the left, the flow comes back to the aerator mode. When the faucet is turned off, the flow is automatically diverted to the aerator mode.

Fig. E:

REPLACEMENT OF THE CARTRIDGE (close the main water supply)
If you need to replace the cartridge: unscrew the lever -1- and the grub screw -2- then remove the handle -3- towards the top. Unscrew the cap -4- and the ring nut -5-. Take out the cartridge -6-. To assemble, proceed in reverse order making sure the surfaces in contact with the seals are clean. Tighten the ring nut -5- in such a way to guarantee the seal and at the same time to assure that the handle turns smoothly.

REPLACEMENT or CLEANING OF THE AERATOR:

It is advisable to clean the aerator periodically to avoid build-up of dirt and limestone residues, which in time could gradually limit the water flow. To disassemble the aerator unscrew the ring nut -32.03- and clean the filter -32.02- from all impurities. Reassemble by proceeding in the reverse order making sure the gasket -32.01- is correctly placed.

DATOS TECNICOS:

Alimentación	Aconsejada	Máxima	Minima
Temperatura agua caliente	65 °C (~150F)	80 °C (~175F)	15 °C (~60F)
Presión de ejercicio	3 BAR (~45PSI)	5 BAR (~75PSI)	0.5 BAR (~7PSI)

En caso de presiones de ejercicio superiores a 75 psi (5 BAR), se aconseja el uso de un reductor de presión.

Por su política de continuo progreso, Paini SpA se reserva el derecho de modificar las características de los productos de grifería sin previo aviso, por lo tanto los diseños y los datos de estas instrucciones tienen que ser considerados como indicativos.

Consejos para la limpieza:

La limpieza de las partes cromadas o acabados diferentes debe efectuarse exclusivamente con agua y jabón neutro, utilizando una esponja o un paño suave. Para la limpieza del aireador utilizar exclusivamente un anticálculo líquido. ATENCIÓN, NO utilizar productos abrasivos o demasiado ácidos.

Fig. A:

Posicionar el grifo en el agujero del fregadero poniendo la junta -24- como en la figura. Enroscar la ducha -32- con el flexible -29- poniendo la junta -30- en el medio.

Fig. A.1:

Si el fregadero tiene tres agujeros utilizar la plancha de 8": posicionar la plancha -27- sobre el agujero del fregadero poniendo la base de material plástico -26-.

Fig. B:

Introducir la guarnición -23- y la brida -22- en el perno roscado -14- y fijar el grifo medio del tirante -21-. Si necesario aumentar la estabilidad del grifo, utilizar la brida -25- entre la guarnición -23- y el fregadero.

Fig. C:

Conectar los tubos de alimentación -20- a la instalación hídrica: el tubo de alimentación izquierdo al suministro de agua caliente, y el tubo de alimentación derecho al suministro de agua fría. En caso utilizar las juntas provistas -19-. Conectar el flexible de la ducha -29- al tubo de salida del grifo -15- poniendo en medio la junta -16-. Acabar la instalación conectando el contrapeso -18- garantizando un recorrido suficiente para extraer la ducha de teléfono.

Fig. D:

Comprobar el funcionamiento del grifo:

Como en la figura, abriendo el agua el chorro sale del aireador; presionando el pulsador superior el chorro se conmuta en ducha; girando un poco el pulsador a la derecha o a la izquierda, el chorro vuelve a la posición de aireador. Cuando se cierra la emisión, el chorro es desviado automáticamente a la posición aireador.

Fig. E:

SUSTITUCIÓN DEL CARTUCHO:

(cerrar el suministro principal de agua)
Para sustituir el cartucho, destornillar la palanca -1- y el tornillo -2-, sacar la manilla desde arriba. Destornillar el capuchón -4- y la abrazadera de apretamiento -5-. Extraer el cartucho mezclador -6-. Obrar en el sentido opuesto para montar de nuevo todo el conjunto, cerciorándose de limpiar la superficie de apoyo en el grifo de las juntas de base del cartucho. Apretar la virola -5- garantizando la retención y, de modo simultáneo, un movimiento suave de la manilla.

SUSTITUCIÓN O LIMPIEZA DEL AIREADOR:

Es aconsejable efectuar la limpieza periódica del aireador para evitar que se acumulen residuos y caliza que con el pasar del tiempo son la causa de una gradual disminución del caudal. Para efectuar el desmontaje del aireador destornillar la abrazadera -32.03- y limpiar el filtro -32.02- quitando las impurezas. Montar de nuevo obrando en el sentido inverso, cerciorándose de posicionar correctamente la junta -32.01-.