
STONE FOREST VESSEL INSTALLATION

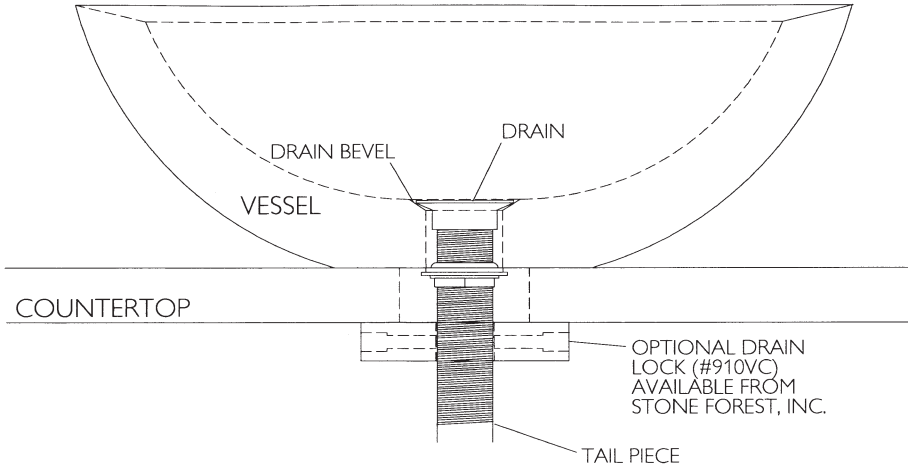

■ Required drain use 9054D Grid Drain. Drains are 1.25" NPT. This can be supplied by Stone Forest at your request in select finishes.

■ Do not use pop-up drains

■ Fasten drain to vessel per drain instructions. **Do not overtighten the drain nut.** Hand tighten only. Overtightening can stress the stone and cause the sink to fracture. Fractures/leaks caused by overtightening will not be covered by the Stone Forest Warranty. DAP Qwik Seal or Henkels PolySeam Seal can be used between the drain bevel and drain. **Do not use plumbers putty.**

■ A 3" hole in counter material is needed.

■ Secure the vessel to the countertop using a bead of DAP or Henkel's, or construction adhesive, formulated for marble and granite.

■ A drain lock is available from Stone Forest if needed. This collar can be fastened to the drain pipe and used to anchor the vessel to the counter material using the drain.