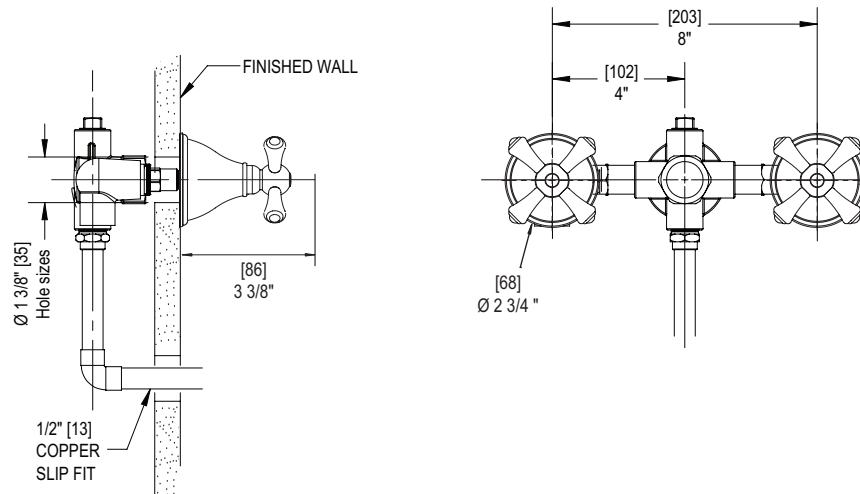
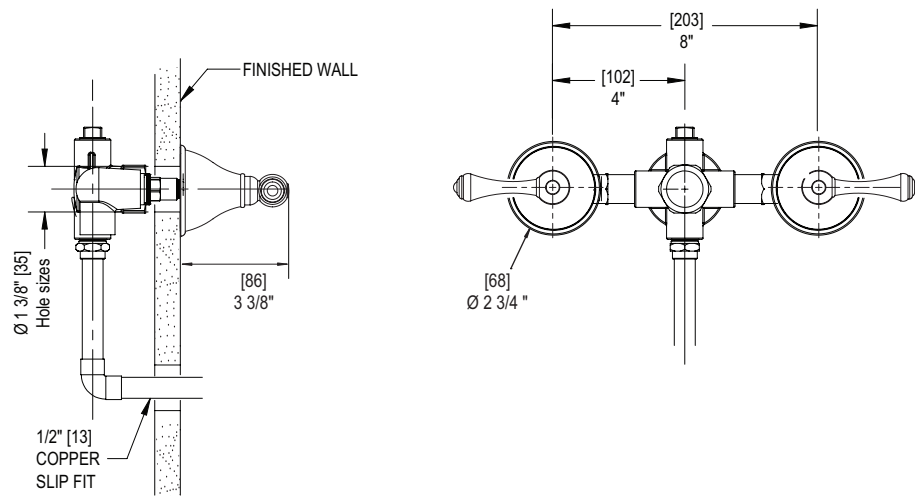


FEATURES:

- Brass construction with choice of 21 finishes
- Two handles
- Quarter-turn ceramic disk cartridges
- Flow Rate : 8.0 gpm @ 50 psi


APPROVAL:

- AB1953 / NSF61
- ASME A 112.18.1
- CSA B125.1

**CONTACT US:**

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit www.rubinet.com


161103

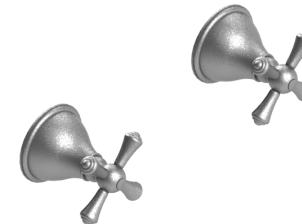THE **Rubinet** FAUCET COMPANY**ASSEMBLY INSTRUCTION****3AFML or C****TWO VALVE TUB FILLER****3AFML****3AFMC****REMOVAL OF FIXTURE:**

Always turn the water supply off before removing the existing faucet or disassembling a valve. Open both faucet handles to relieve water pressure and to ensure that the water has been successfully turned off.

CARE OF FIXTURE:

The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.


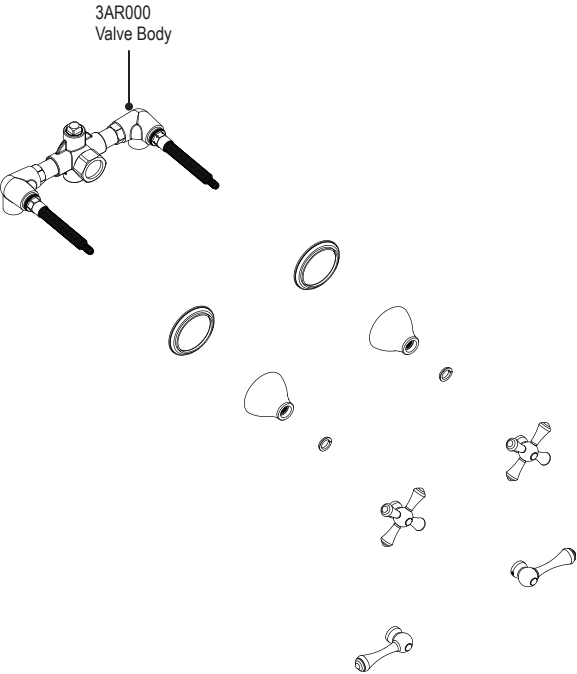


HANDLE ALIGNMENT (3A)


1 LOCK NUT Loosen the lock nut using * 17mm Deep Socket. 1/2" Drive Remove THREADED SLEEVE	2 Use Handles to unscrew cartridge. Turn both splines counter clock-wise.
3 Once cartridge valves are loose, screw them back into the faucet using the handle. Stop when you feel a noticeable resistance. Then remove handles.	4 Replace Left Handle (hot) one tooth off from the OFF position as shown. And Right Handle (cold) one tooth off from the ON position as shown.
5 Turn the handles to the desired alignment. (This will unscrew the cartridge) This adjustment should not be more than 25°.	6 LOCK NUT Recommended torque 20Nm Tighten Lock Nut using 17mm Deep Socket wrench to secure cartridge valve position. *Use handle to hold spline while tightening.

4



Tighten set screws to secure

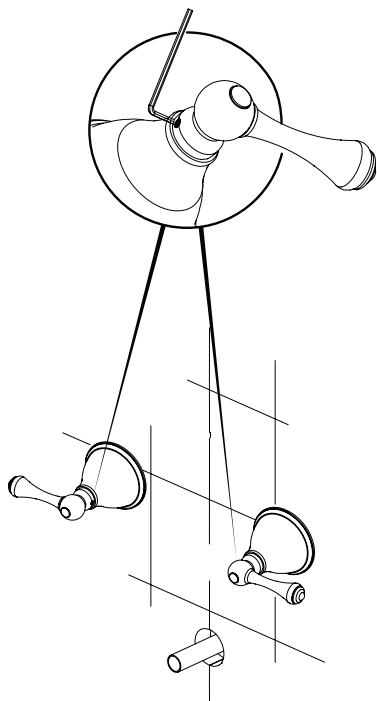**IF THE HANDLES DO NOT ALIGN CORRECTLY**


You can adjust them. Please refer to the 'Handle Alignment' instruction at the back.

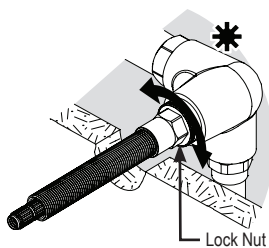


1

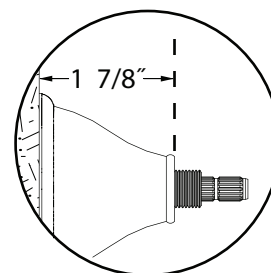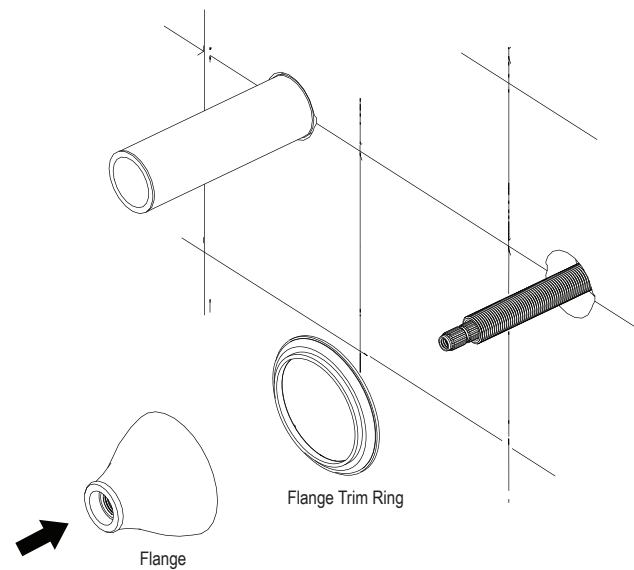

**MUST CUT FLUSH
TO THE FLANGE TRIM**
* 1 7/8" (47.5mm)
from the finished wall

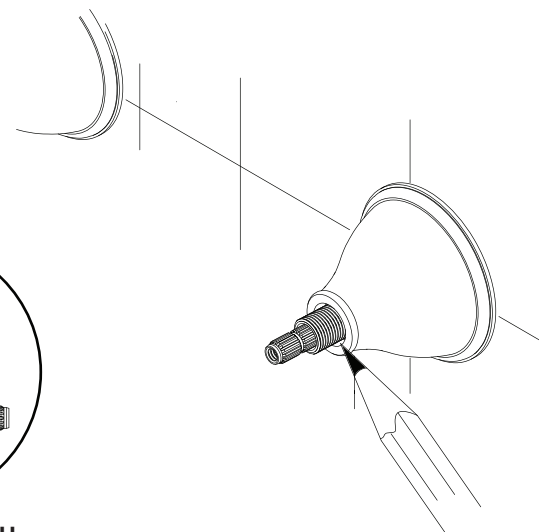

2

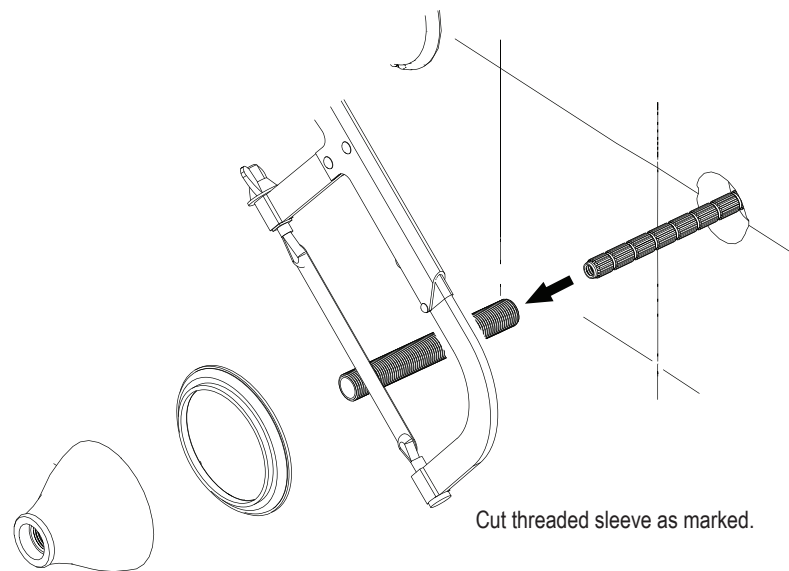

3

