
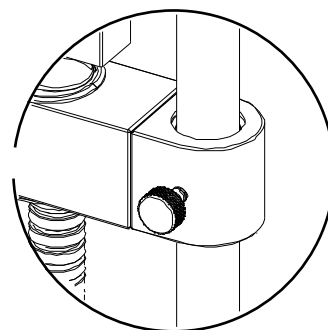


* Drill 4 holes using 8 mm drill bit
and insert Plastic Anchors

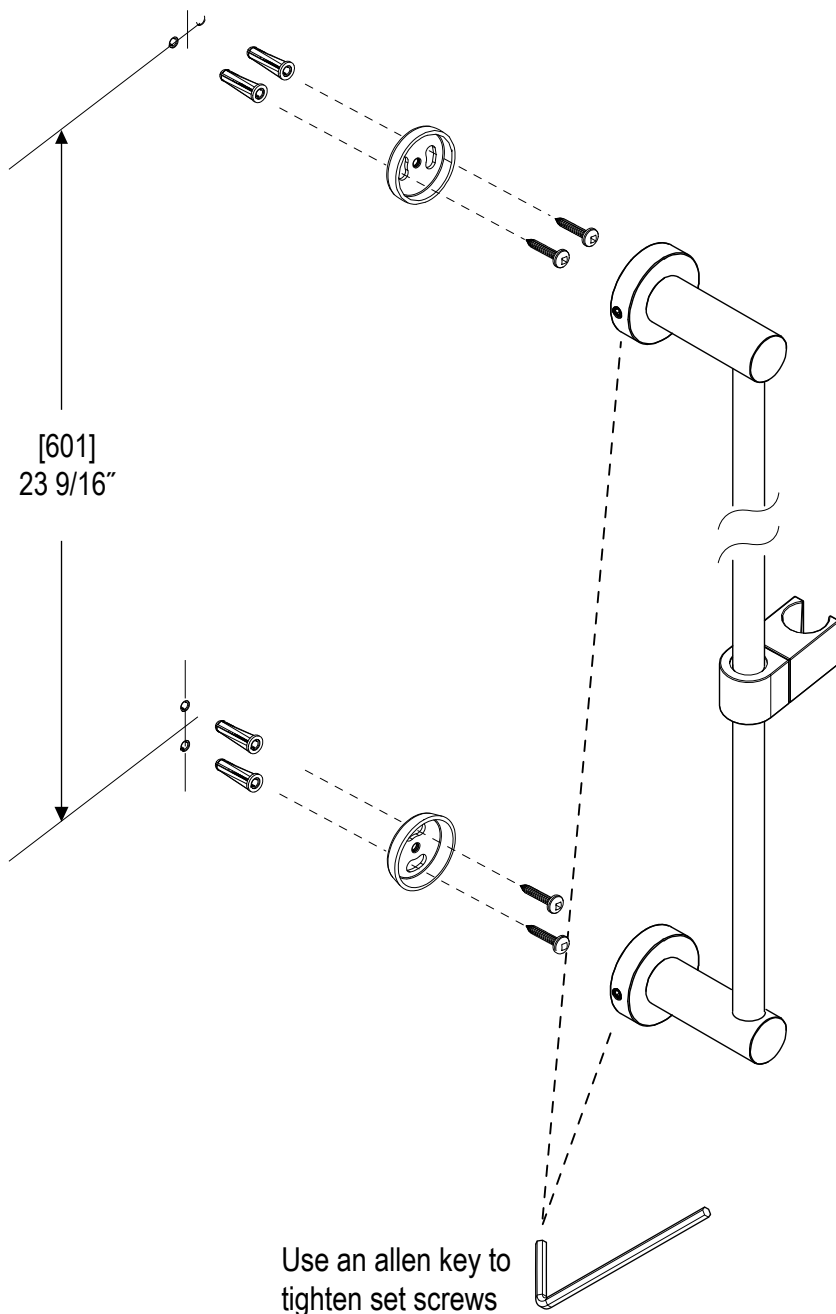

Adjust sliding resistance by
tightening or unscrewing