


1. PLACE LEVER REST ARM ASSEMBLY INSIDE THE BOWL AND SCREW SHANK NUT COUNTER CLOCKWISE UNTIL TIGHT.

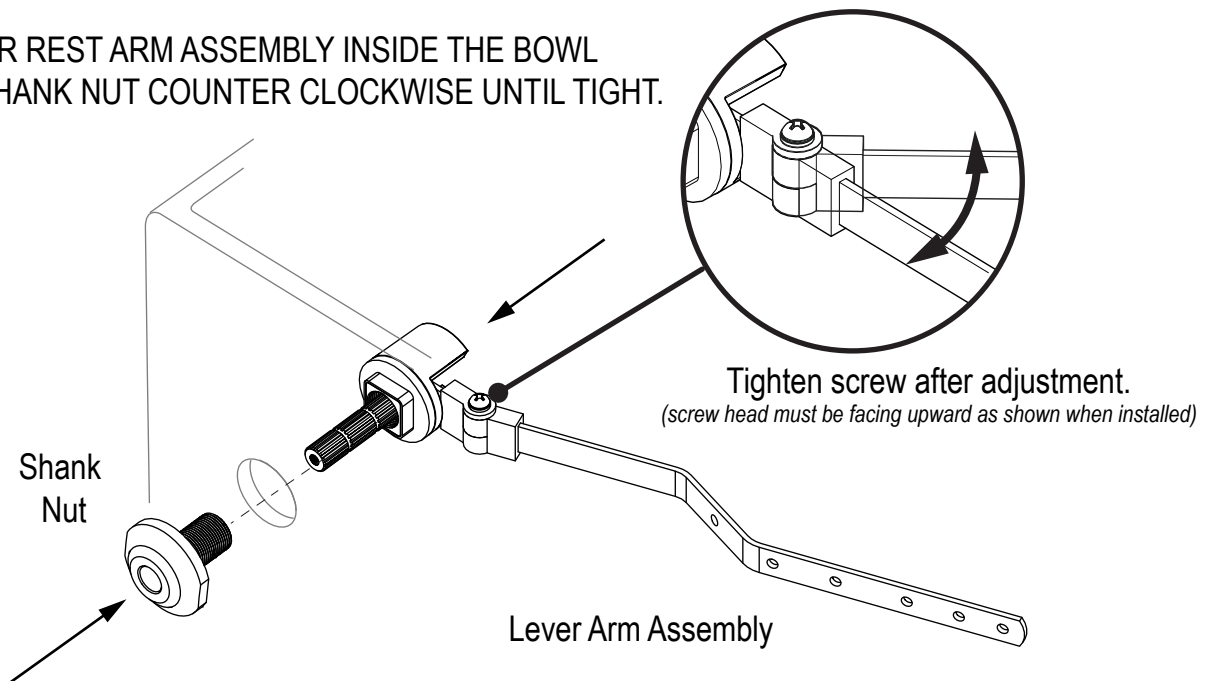

2. ATTACH HANDLE TO THE LEVER TOGGLE AND TIGHTEN SET SCREW TO SECURE.

