


Drawers:  
16" Deep  
A 3 3/4" High  
B 4 3/4" High

21" Deep or 18" Deep option.

Basin placement range varies with brand and model. Shown is for Kohler 2210. Offset basin placement not recommended for 30" wide vanities.

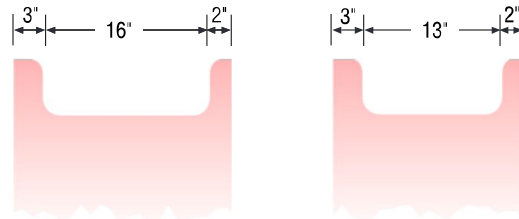

Internal Dividers

### 30" Vanity

Right Hand or Left Hand Drawers

30" wide  
34 1/2" tall  
21" or 18" front-to-back

