



K-97339

Mounting block for select floor-mount bath fillers

Features

- For use with select KOHLER® freestanding bath fillers
- Can be installed without required freestanding bath filler
- Mounting block provides a stable foundation for freestanding bath fillers



Available Colors/Finishes

Color tiles intended for reference only.

NA NA Not Applicable



1-800-4KOHLER (1-800-456-4537)
Kohler Co. reserves the right to make revisions without notice to product specifications.
For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.
7-29-2026 18:56 - US-CA

THE BOLD LOOK
OF **KOHLER**®

Codes/Standards

ASME A112.18.1/CSA B125.1

Recommended Products/Accessories

K-23723 Faucet cleaner

Required Products/Accessories

- K-T27424-4 Floor-mount bath filler trim with handshower
- or
- K-T22025-4 Floor-mount bath filler trim with handshower
- or
- K-T27408-4 Floor-mount bath filler trim with handshower
- or
- K-T72790-9M Floor-mount bath filler trim with handshower
- or
- K-T23492-4 Floor-mount bath filler trim with handshower
- or
- K-T97328-4 Floor-mount bath filler trim with handshower
- or
- K-T73087-4 Floor-mount bath filler trim with handshower
- or
- K-T77984-4 Floor-mount bath filler trim with lever handles and handshower
- or
- K-T77984-9 Floor-mount bath filler trim with industrial handles and handshower
- or
- K-T35924-4 Floor-mount bath filler trim with handshower
- or
- K-T27025-4 Floor-mount bath filler trim with handshower


Warranty

See website for detailed warranty information.

KOHLER® Faucet Lifetime Limited Warranty



1-800-4KOHLER (1-800-456-4537)
Kohler Co. reserves the right to make revisions without notice to product specifications.
For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.
7-29-2026 18:56 - US-CA

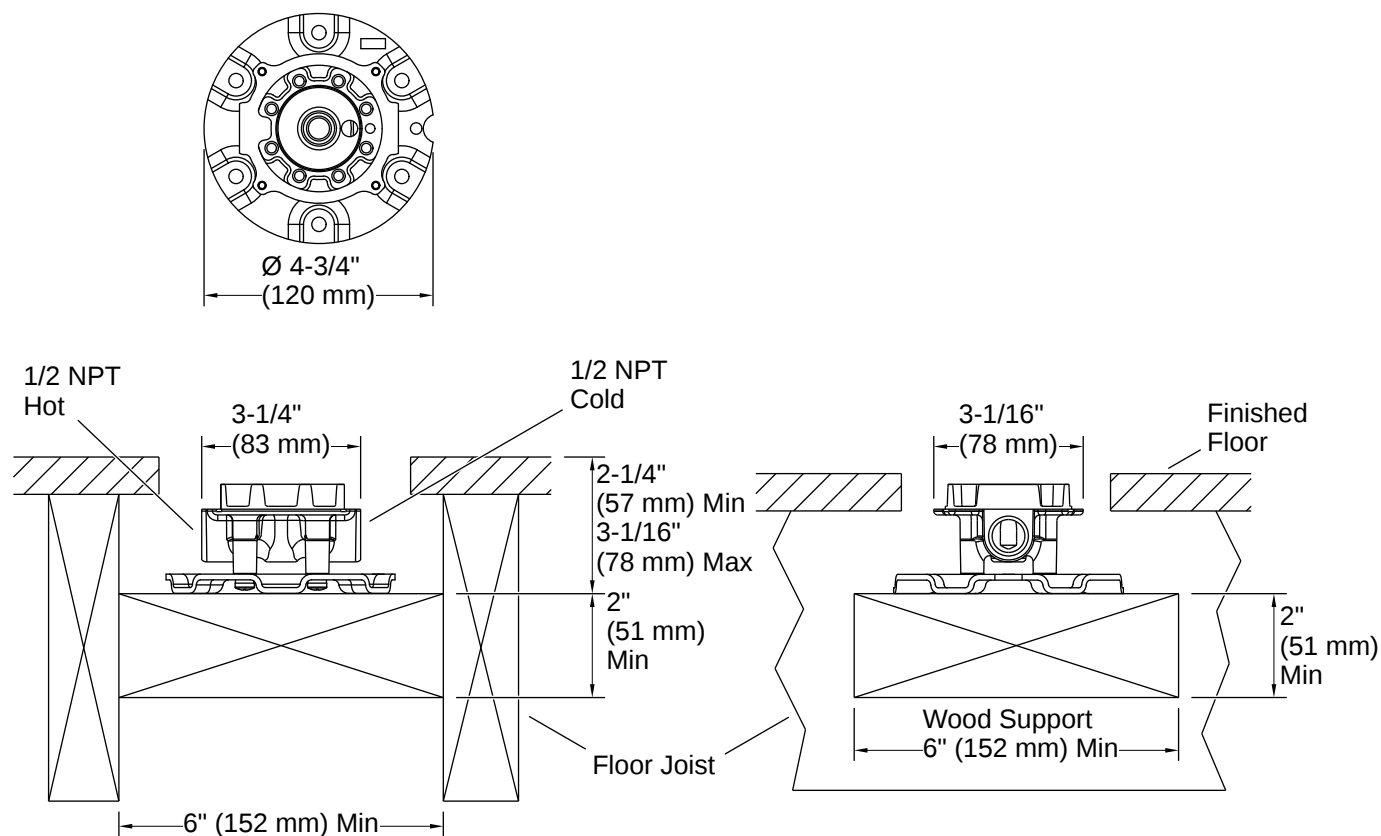

Installation

- Installs into wood or concrete subfloor to anchor the bath filler

Installation Notes

Install this product according to the installation instructions.

Adequate floor support is required. The wood support must be a minimum of 2" (51 mm) thick by 6" (152 mm) wide. 2x6 lumber is NOT adequate for this application.

Concrete can be used as the floor support. Requires 3/16" masonry drill bit and six 1/4" x 1-3/4" concrete screws, not included.

