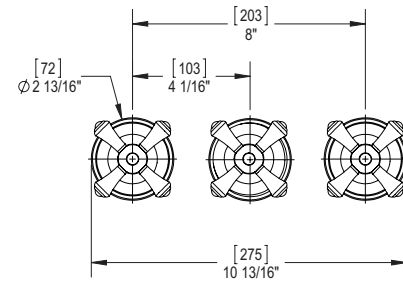
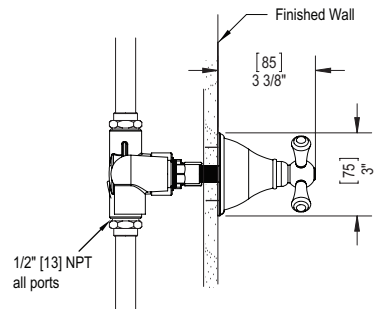
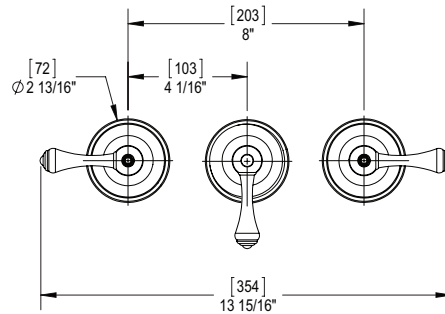
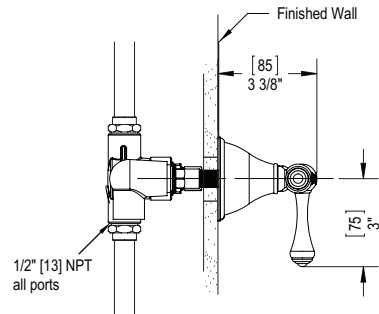


FEATURES:

- Brass construction with choice of 21 finishes
- Two Lever or Cross handles, diverter
- Quarter turn Ceramic Disk cartridges
- Flow Rate
Shower : 7.0 gpm @ 50 psi
Tub : 7.0 gpm @ 50 psi

APPROVAL:

- AB1953 / NSF61
- ASME A 112.18.1
- CSA B125.1


**CONTACT US:**

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit www.rubinet.com

161102

THE **Rubinet** FAUCET COMPANY**ASSEMBLY INSTRUCTION****2AFML or C**


THREE VALVE TUB & SHOWER

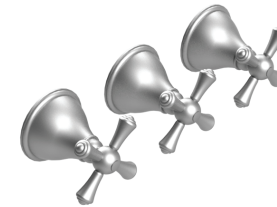**2AFML****2AFMC****REMOVAL OF FIXTURE:**







Always turn the water supply off before removing the existing fixture or disassembling a valve. Open all fixture handles to relieve water pressure and to ensure that the water has been successfully turned off.

CARE OF FIXTURE:



The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

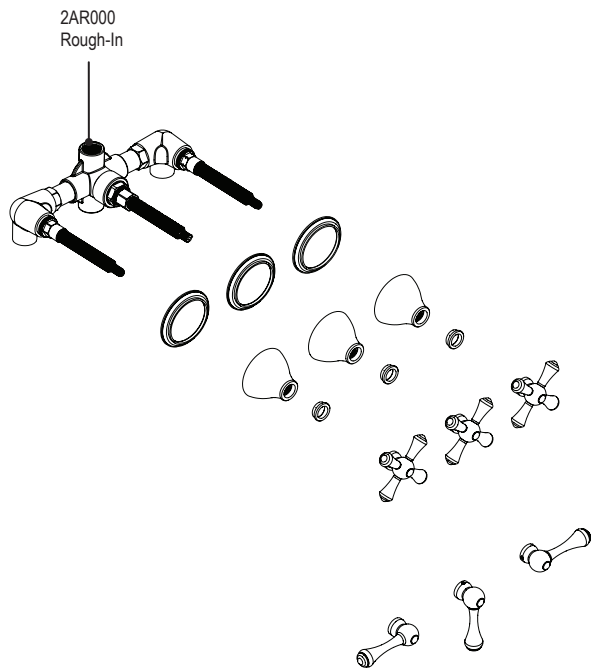


HANDLE ALIGNMENT (2A)

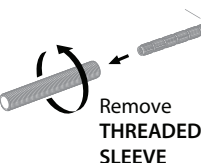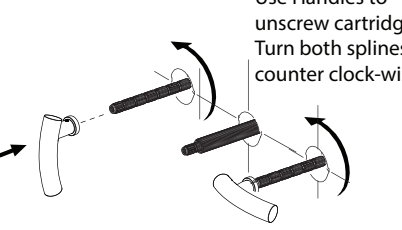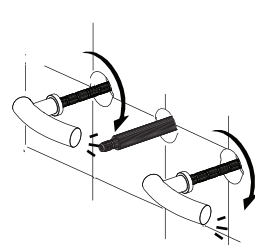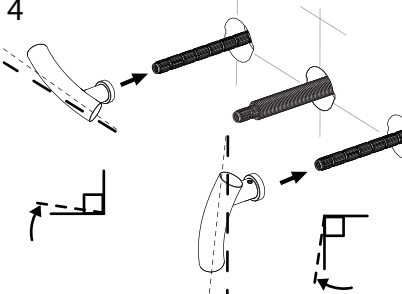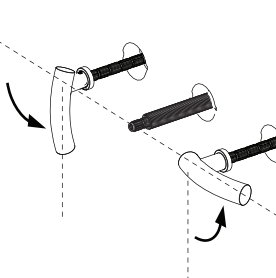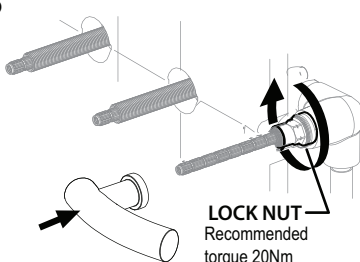1 *  LOCK NUT Loosen the lock nut using * 17mm Deep Socket. 1/2" Drive  Remove THREADED SLEEVE	2  Use Handles to unscrew cartridge. Turn both splines counter clock-wise.
3  Once cartridge valves are loose, screw them back into the faucet using the handle. Stop when you feel a noticeable resistance. Then remove handles.	4  Replace Left Handle (hot) one tooth off from the OFF position as shown. And Right Handle (cold) one tooth off from the ON position as shown.
5  Turn the handles to the desired alignment. (This will unscrew the cartridge) This adjustment should not be more than 25°.	6  LOCK NUT Recommended torque 20Nm Tighten Lock Nut using 17mm Deep Socket wrench to secure cartridge valve position. *Use handle to hold spline while tightening.



4

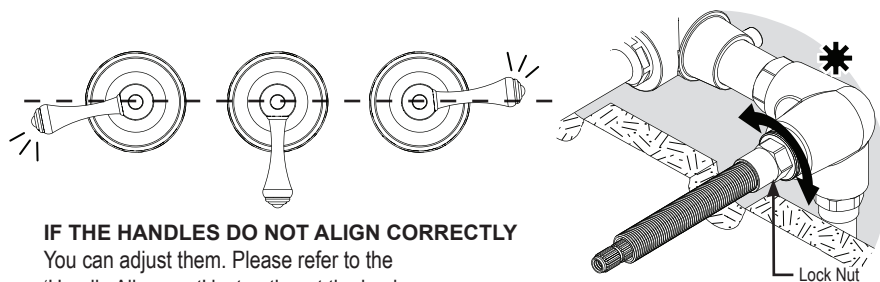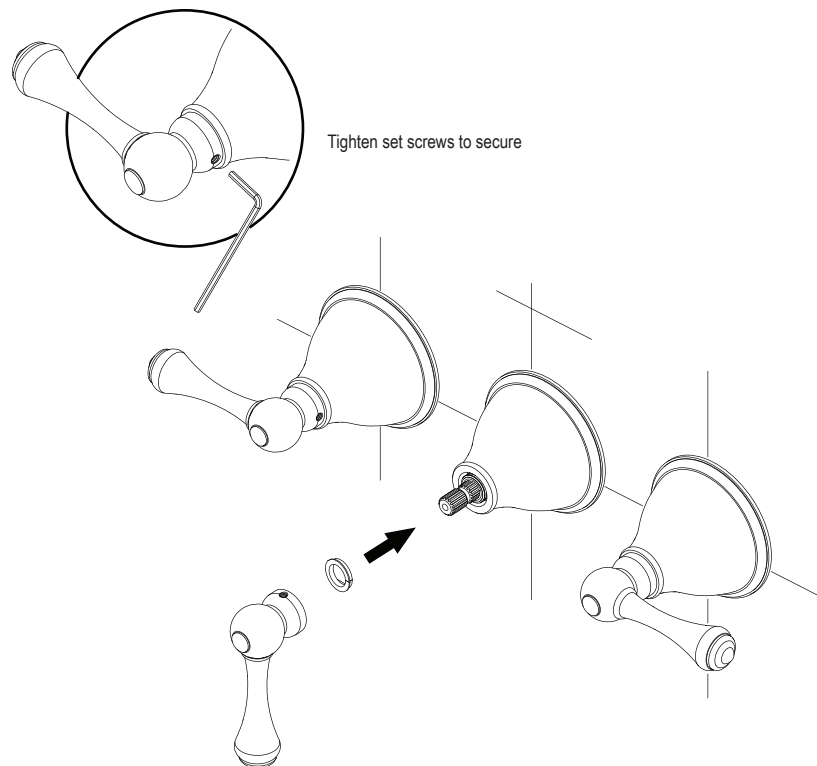


1

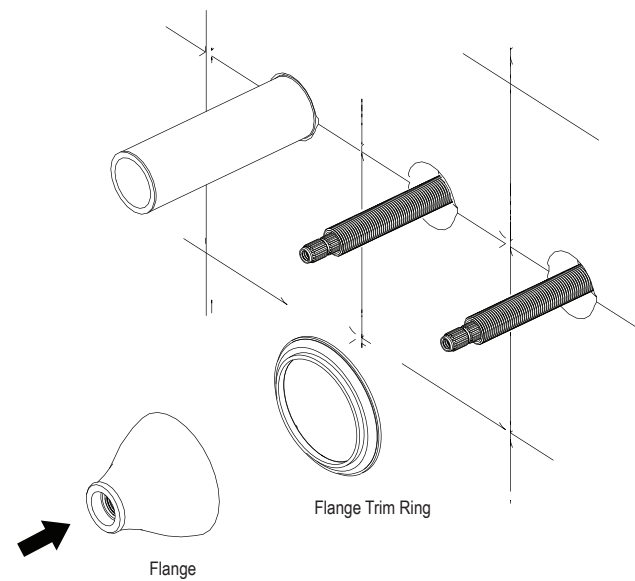


**MUST CUT FLUSH
TO THE FLANGE TRIM**
* 1 7/8" (47.5mm)
from the finished wall

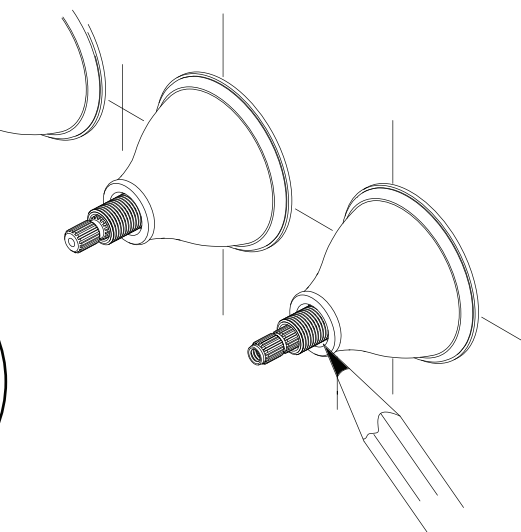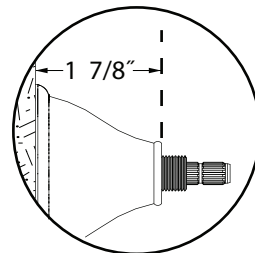

2

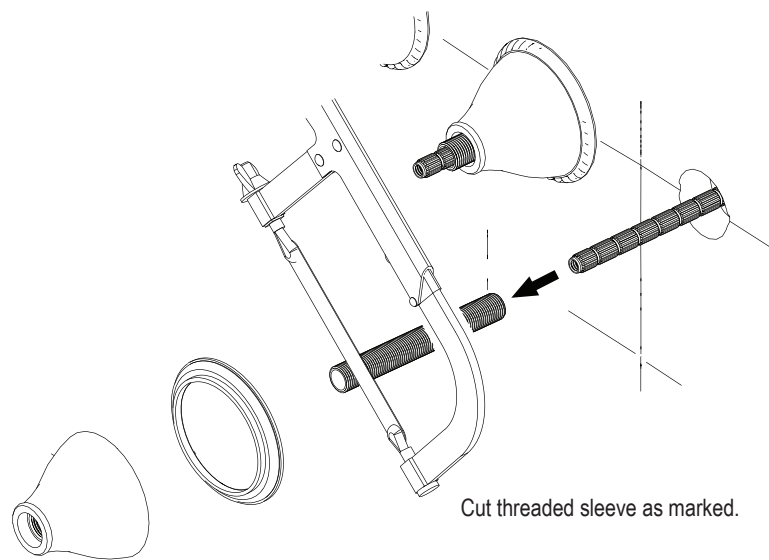

3

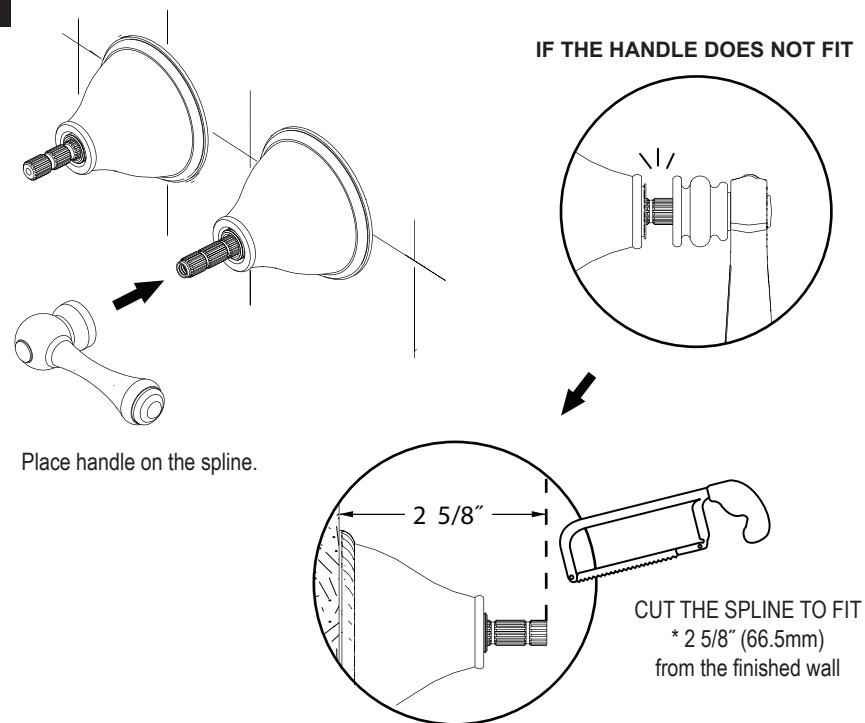

Turn each cartridge
splines into **OFF** position
before installing handles

